


Re-packing the 300/350 Product P/N's 108380/107620

Procedure P/N 110959 REV 0



14140 NE 200th St.
Woodinville, WA 98072
1.425.398.8282
www.ioline.com

Tools needed: Phillips screw driver.

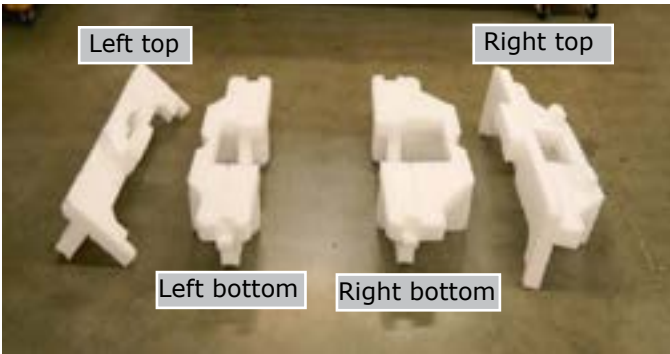

Step 1: The 4 pieces of foam that will be needed to properly pack the 300/350.



IMPORTANT: Requires two people to lift the 300/350 onto the table.

Step 3: All 4 screws (2 in the front) & (2 in the back) are in place to secure the tray from moving.




Step 5: Lift the 300/350 up and place it on top of the foam. You will see a slot in the foam in which the leg will slide into. Press down on the machine into the foam.




Step 7: The right bottom foam is lined up and the 300/350 is ready to lift upon the foam.



Step 2: Install the 4 screws (1 in each corner) that secure the sliding tray to the end plate legs. You can finger hold the locking nut when threading down the screw until it stops. NOTE: The locking nut is held underneath the tray and leg. (Blue arrow).

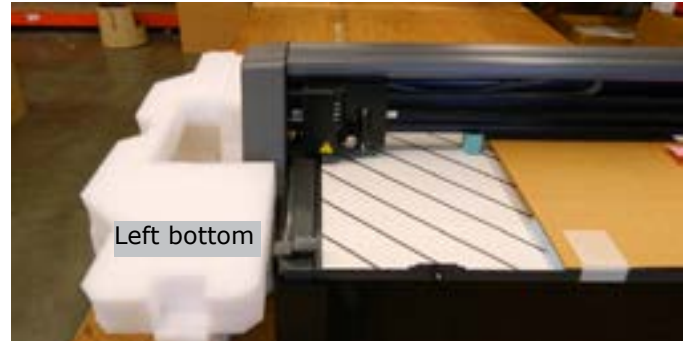


Step 4: The left bottom foam is lined up and the 300/350 is ready to lift upon the foam.

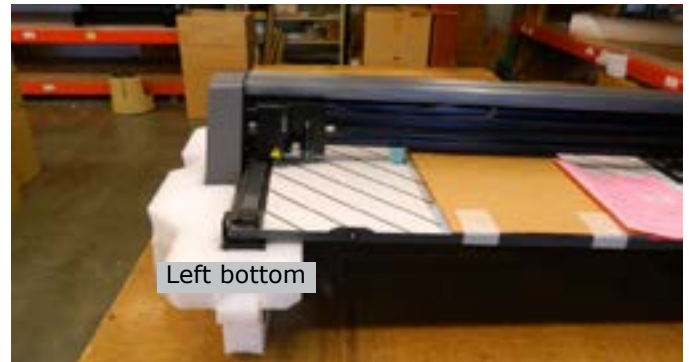

Step 6: This is how the left side should appear after you have pressed down on the 300/350.




Step 8: Lift the 300/350 up and place it on top of the foam. You will see a slot in the foam in which the leg will slide into. You can now press down on the 300/350.

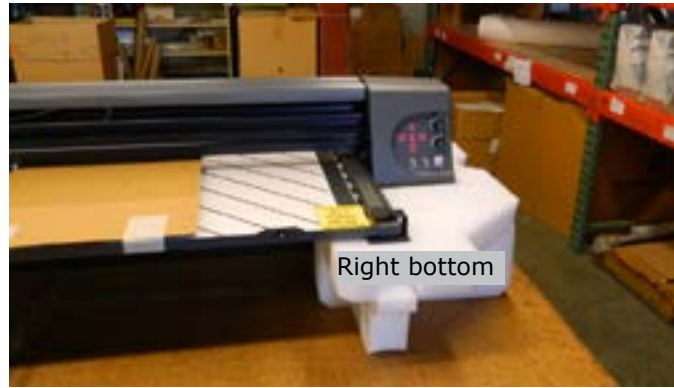


Step 9: This is how the right side should appear after you have pressed down on the 300/350.




Step 10: The left and right side bottom pieces are correctly in place.

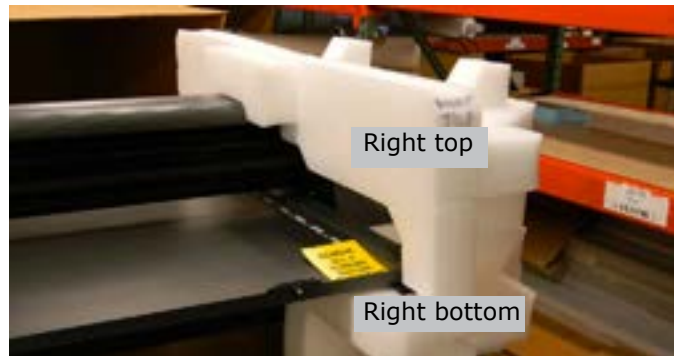

Step 11: The top right side foam simply slides down over the platen and locks into the bottom piece.

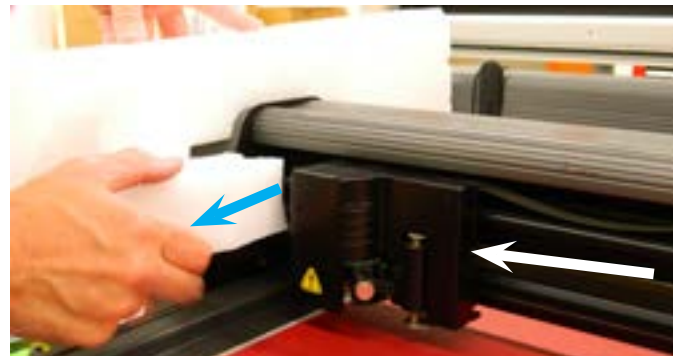

Step 12: While holding open the left top piece of foam (blue arrow), slide the carriage (white arrow) in until it is securely wrapped by the carriage foam extension... See step 13.

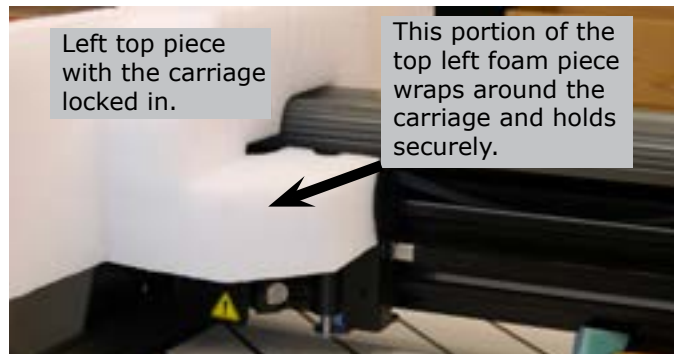

Step 13: The left top piece has a section that holds the carriage securely in place. The top section also locks into the bottom piece.



Step 14: All 4 foam pieces are correctly and securely installed. The 300/350 is shown partially pushed into the carton.



Step 15: The 300/350 is shown pushed all the way into the carton. You will need to hold the carton when sliding the 300/350.



Step 16: NOTE: Use strong shipping tape for the 3 exposed edges of the lid. The 300/350 is ready for shipping. ---FINISHED.

Step 6:

Step 7:

Step 8:

Step 9:

Step 10:

Step 11:

Step 12:

Step 13:



14140 NE 200th St.
Woodinville, WA 98072
1.425.398.8282
www.ioline.com

Step 14:

Step 15:

Step 16:

Step 17:

Step 18:

Step 19:

Step 20:

Step 21: